

D Installation

GB Installation

F Installation

E Instalación

I Installazione







P instalação

NL installatie


FIN Asennus

SE Installation

N Installasjon

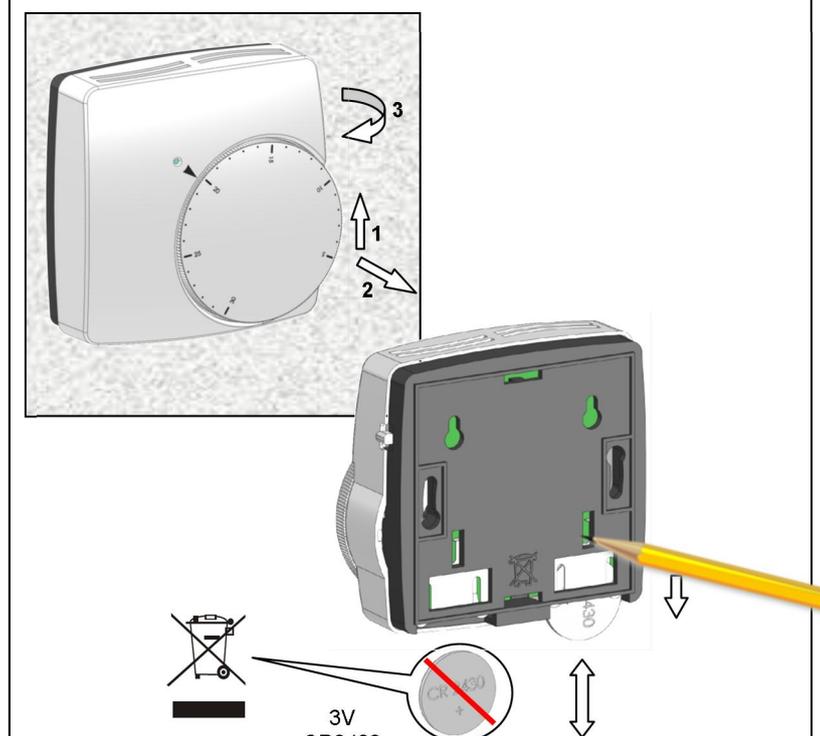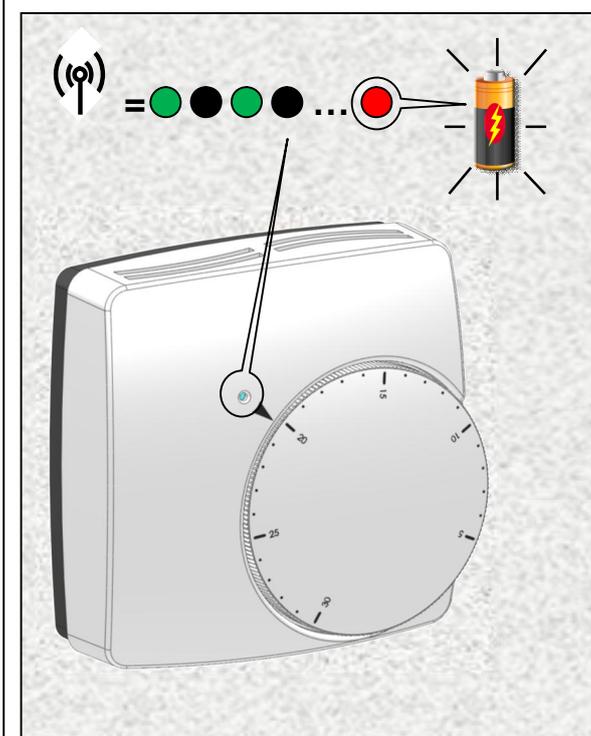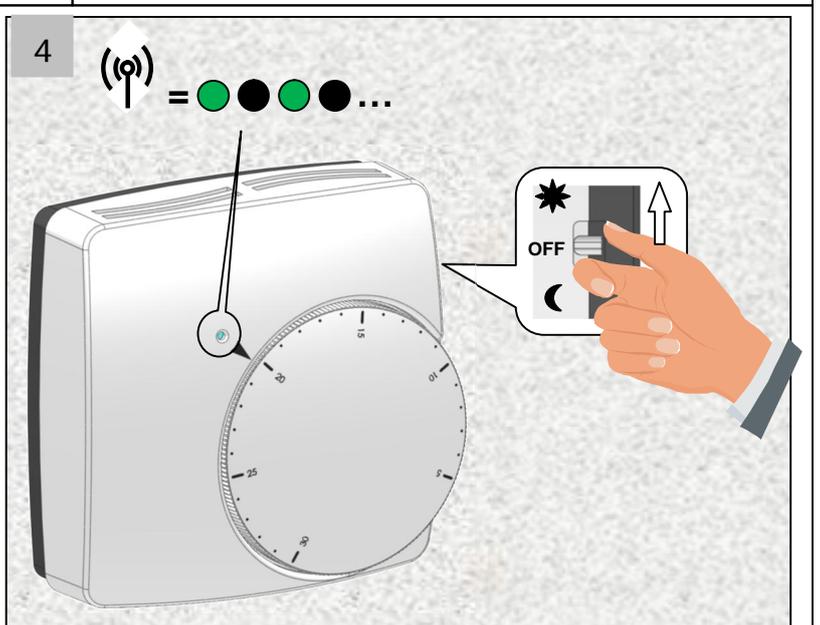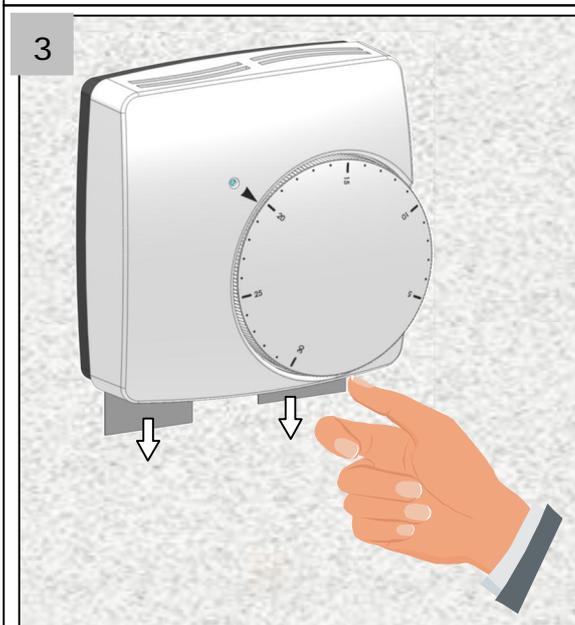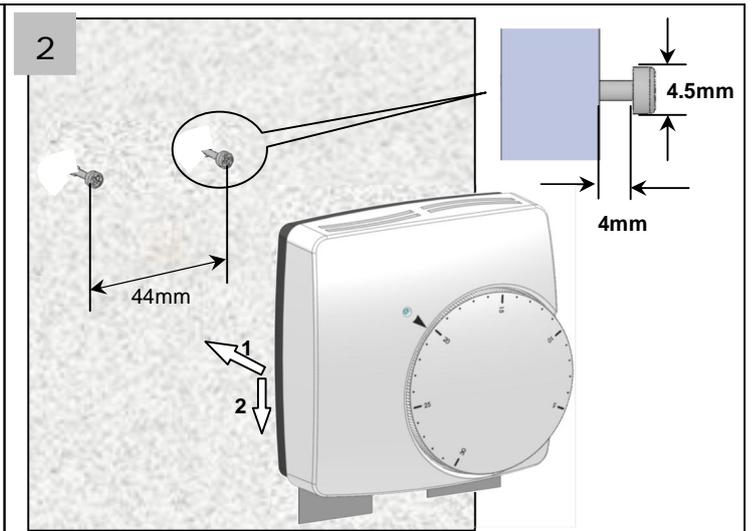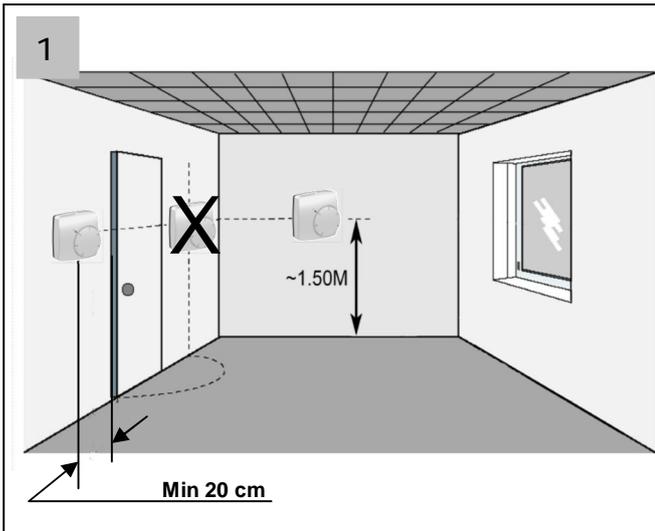

D Begrenzung **GB** Limitation **F** Limitation **E** Limitación **I** Limitazione
P Limitação **NL** Begrenzing **FIN** Kalibrointi **SE** Begränsning **N** Begrensning

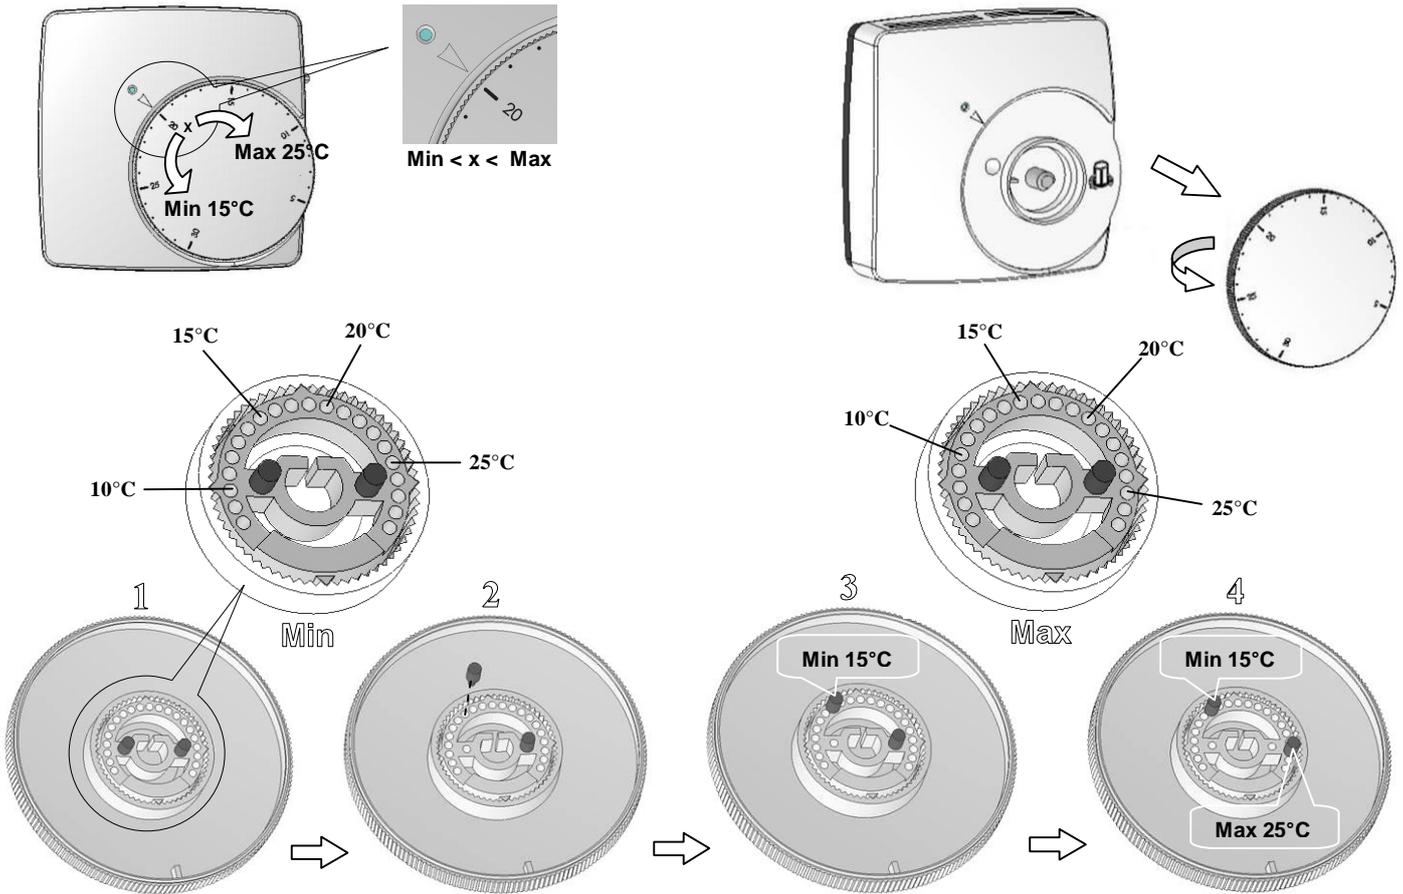

D Kalibrierung **GB** Calibration **F** Calibration **E** Calibración **I** Calibrazione
P Calibração **NL** Calibratie **FIN** Säädön Rajoitus **SE** Kalibrering **N** Kalibrering

